

**ATTENTION INSTALLER:**



INSTALLATION MUST BE IN COMPLIANCE WITH THE NATIONAL FUEL GAS CODE Z223.1, NFPA 54 OR CSA B149.1 AND ALL LOCAL GAS INSTALLATION CODES.

INSTALLATION AND TESTING MUST BE PERFORMED BY QUALIFIED PERSONNEL.

ENSURE THAT THE GAS SUPPLY AND ALL THE APPLIANCE CONTROL KNOBS ARE TURNED OFF BEFORE CONNECTING THE GAS SUPPLY.

Rev	Date	Properties
A00	01-24-2012	NEW DRAWING. DG

ORIGINAL  
IF BLUE

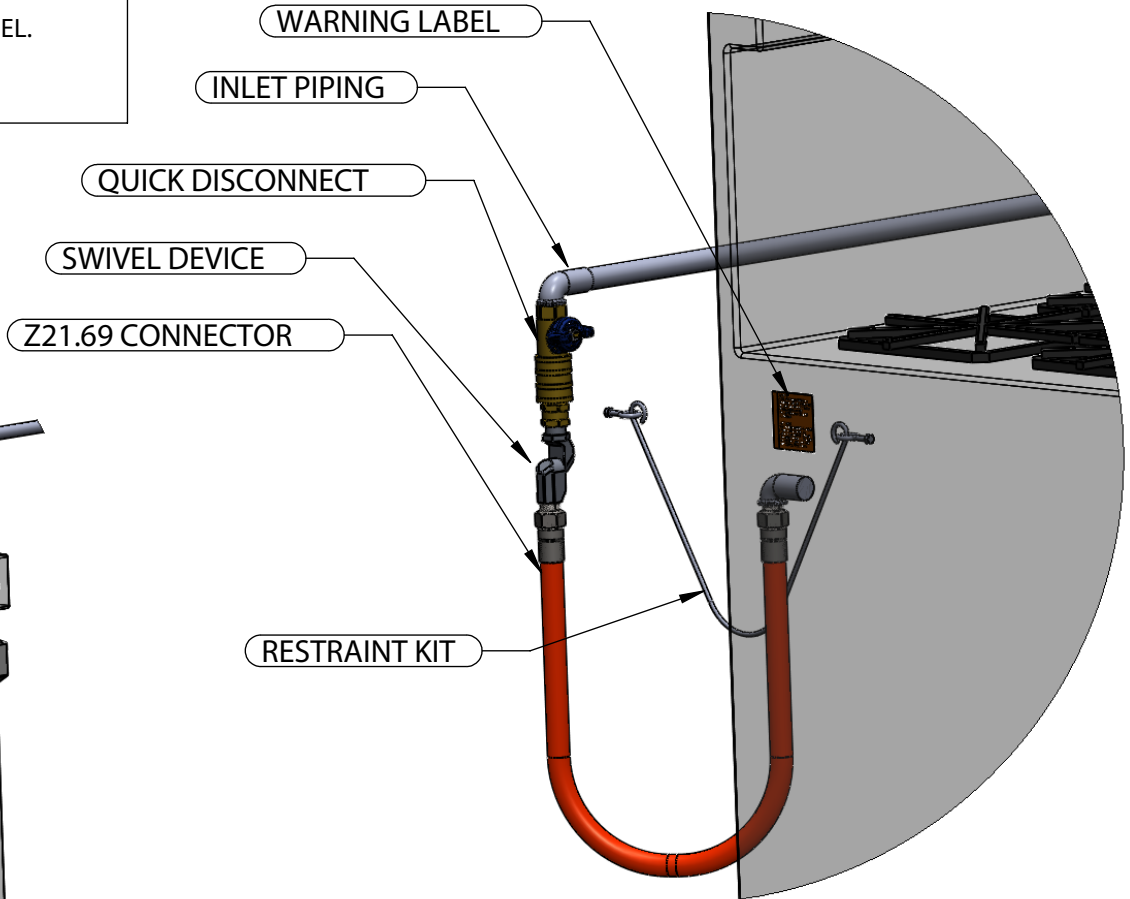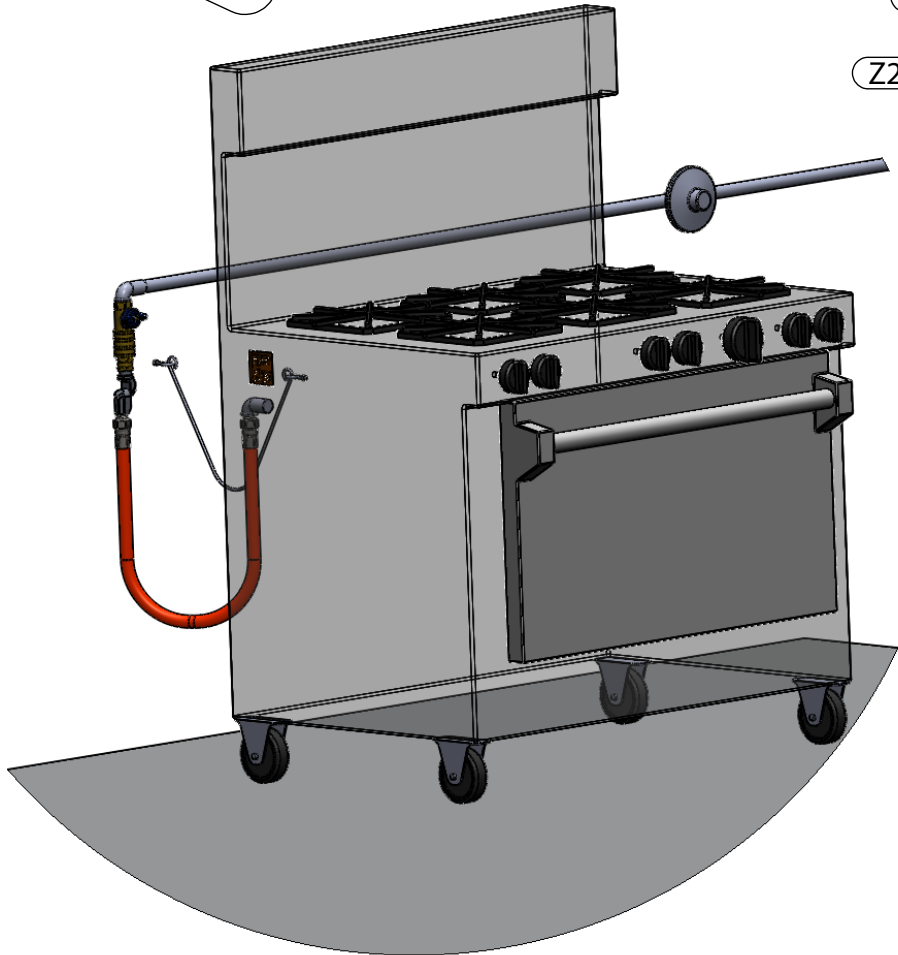

*TYPICAL INSTALLATIONS MAY VARY*

**INSTALLATION NOTES:**

- 1 - EYEBOLTS MUST BE SECURELY FASTENED TO BOTH THE WALL AND THE APPLIANCE IN THE NEAR VICINITY OF THE GAS CONNECTION.
- 2 - WARNING LABEL MUST BE APPLIED TO THE APPLIANCE IN CLOSE PROXIMITY TO THE GAS CONNECTION. (CLEAN SURFACE BEFORE APPLICATION)
- 3 - INSTALLATION MUST ALLOW FOR FREE AND UNRESTRICTED MOVEMENT OF THE GAS CONNECTOR WHEN THE APPLIANCE IS MOVED TO EVERY POSITION ALONG THE PERIMETER OF ITS RESTRAINING CABLE.



This drawing and the information it contains are proprietary and confidential. Disclosure or copying requires the written approval of:  
 MB Sturgis, Inc.  
 555 Fee Fee Road  
 Maryland Heights, MO 63043  
 (314) 291-6665

Unless Otherwise Specified  
 .X +/- .015  
 .XX +/- .010  
 .XXX +/- .005  
 Angles +/- 1 Deg  
 Concentricity +/- .010  
 Break Sharp Edges .005 R/Chamfer  
 All Dimensions Are in Inches  
 Quality Assurance Provisions Sampling Plan ANSI Z1.4  
 Attribute +/- .005 >(+/- .005) <(+/- .005) Go Ring No GO Ring Surface  
 AQL 1.0:S-2 2.5:S-2 .65:1 2.5:S-4 6.5:S-4 2.5:S-4

Material: N/A  
 Drawn By: DAG  
 Date: 01-24-2012  
 Checked By: DAG  
 Date: 01-24-2012

Title: RESTRAINT KIT GUIDE  
 Scale: N/A  
 Part Number: 600076  
 Rev: A00